 


Platinum Reversible

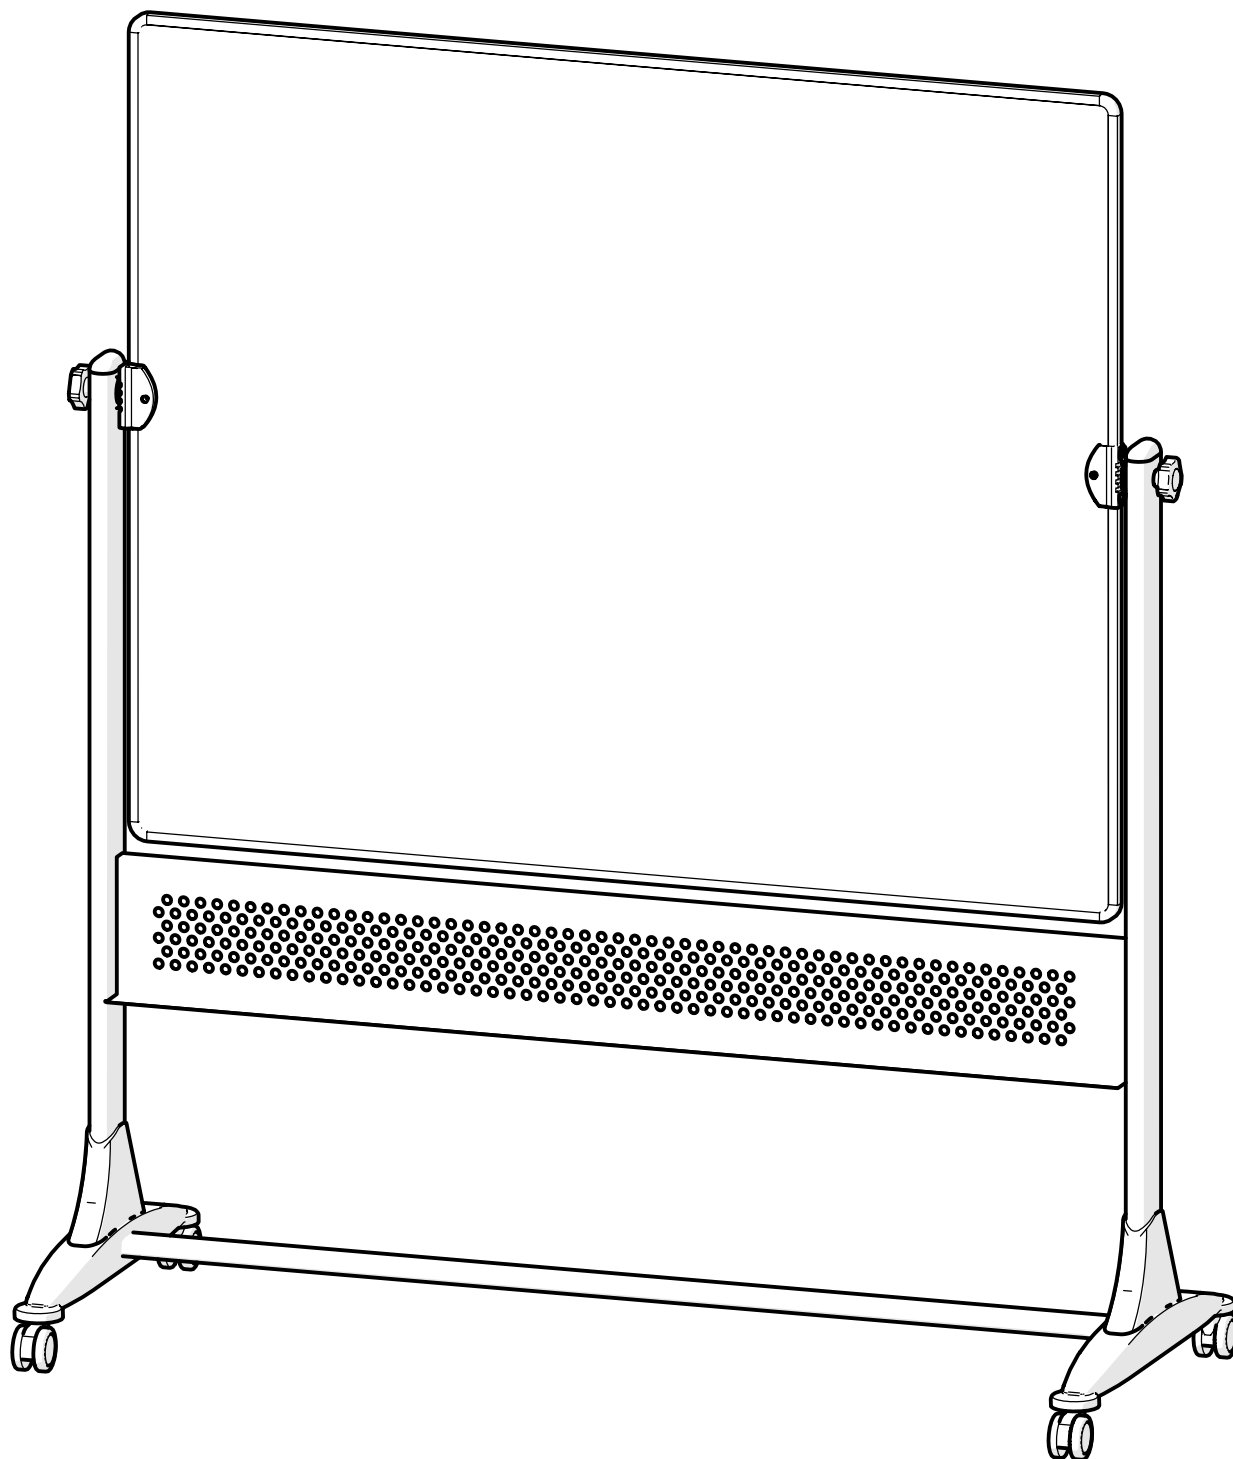

Part Numbers: 669RX-XX



ASSEMBLY INSTRUCTIONS
DO NOT THROW AWAY!

 


INSTRUCCIONES DE ENSEMBLAJE
NO LA TIRE

INSTRUCTIONS DE MONTAGE
NE PAS JETER


Parts List

P1 - Right Leg

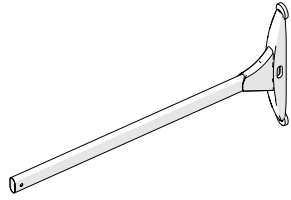


x1

 P2 - Left Leg

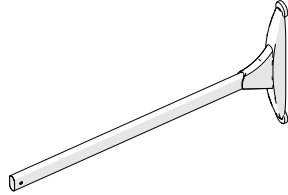


x1

 P3 - Tray

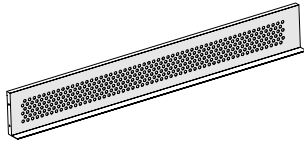


x1

 P4 - Crossbar



x1

 
P5 - Framed Board

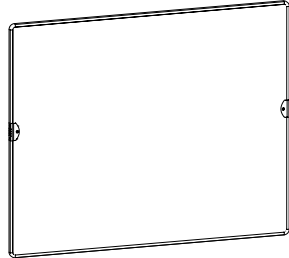

x1


Hardware

 A - Long Socket Screw




x4

 B - Short Socket Screw




x4

 C - Flange

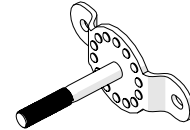


x2

 D - Knob




x2

 E - 3" Caster

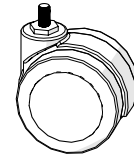


x4

 H - Allen Wrench

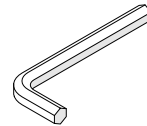

x1

 I - Caster Wrench



x1

J - Lock Washer



x4

WARNINGS AND DISCLAIMERS

Review full assembly instructions and check that all parts are present before beginning assembly. Heavy or large furniture may require multiple persons in order to properly assemble. If you have questions regarding assembly, contact the manufacturer before continuing. Damage due to incorrect assembly may not be covered by warranty. Do not use product unless all screws are tight. Check all screws for tightness at least every six months. If parts are broken, missing, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

ADVERTENCIAS Y RENUNCIAS

Previo a comenzar el proceso de ensamblaje favor de revisar las instrucciones y asegurarse que cuenta con todas las partes y materiales necesarios. Es posible que los muebles grandes o pesados, requieran mas de una persona para ensamblarlos correctamente. Por favor contacte al fabricante directamente si tiene alguna duda o pregunta antes de continuar con el proceso de armado del producto. La garantía no cubrirá daños que ocurrieron por errores cometidos durante el proceso de ensamblaje. Todos los tornillos deben estar ajustados previo el uso del producto. Debe revisar los tornillos periódicamente, por lo menos cada seis meses y asegurarse de que estén bien ajustados. Por favor detenga el uso del producto si partes del producto se pierden, rompen, se deterioran por uso o se rompen. Favor de contactar a su distribuidor para que le envíen las partes necesarias o realice las reparaciones necesarias con partes autorizadas por el fabricante.

AVERTISSEMENTS

Avant de commencer l'assemblage veuillez consulter les instructions complètes et vérifier si vous avez toutes les pièces nécessaires. Il est possible que plusieurs personnes soient nécessaires pour assembler des meubles grand ou lourds. En cas de doute sur l'assemblage contactez le fabricant avant de continuer. Les dommages encourus pendant l'assemblage ne seront pas couverts par la garantie. Ne pas utiliser le produit sans vérifier que tous les vis soient serrées. Vérifiez que les vis sont serrées au moins tous le 6 mois. Si aucune pièce se casse, manque, est endommagée ou usée, arrêtez d'utiliser le produit jusqu'à ce que le vendeur le repaire à l'aide de pièces autorisées par la fabricant.

WARRANTY

For full product warranty details, please visit:

Para obtener información sobre la garantía del producto, consulte este sitio (ingles):

Pour plus d'informations sur la garantie du produit, consultez ce site (anglais):

<http://moorecoinc.com/warranty>

CARE & MAINTENANCE

For questions on assembly or missing/damaged parts, please contact us using the following information.

Para preguntas sobre el ensamblaje o piezas faltantes o dañadas, por favor contáctenos usando la siguiente información.

Pour toute question sur le montage l'assemblage manquantes ou endommagées, veuillez nous contacter en utilisant les l'information ci-dessous.

Email:

support@moorecoinc.com

Phone:

1.800.749.2258

(Monday – Friday, 8AM – 5PM
Central Time)

PRODUCT REGISTRATION

To register your product for warranty, please visit:

 
Para registrar la garantía del producto, vea este sitio (en ingles):

Pour enregistrer la garantie de votre produit, consultez ce site (en anglais):

<https://moorecoinc.com/register>


STEP 1

Slide Crossbar into slots in base of Legs. Secure with two screws inserted from the bottom of each Leg.

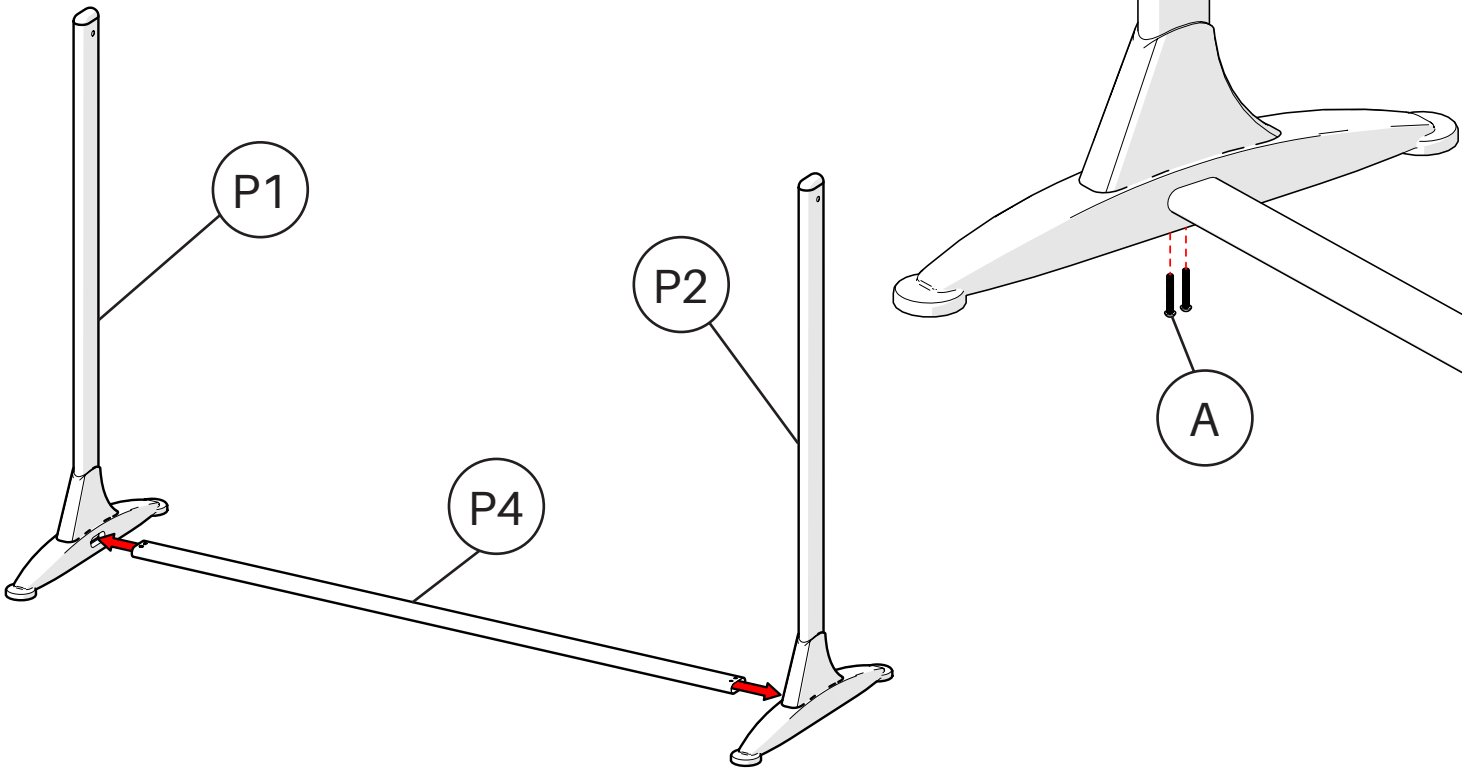



STEP 2

 Place Lock Washers on Caster stems and hand screw into Leg. Tighten with Caster Wrench. Repeat for second Leg.

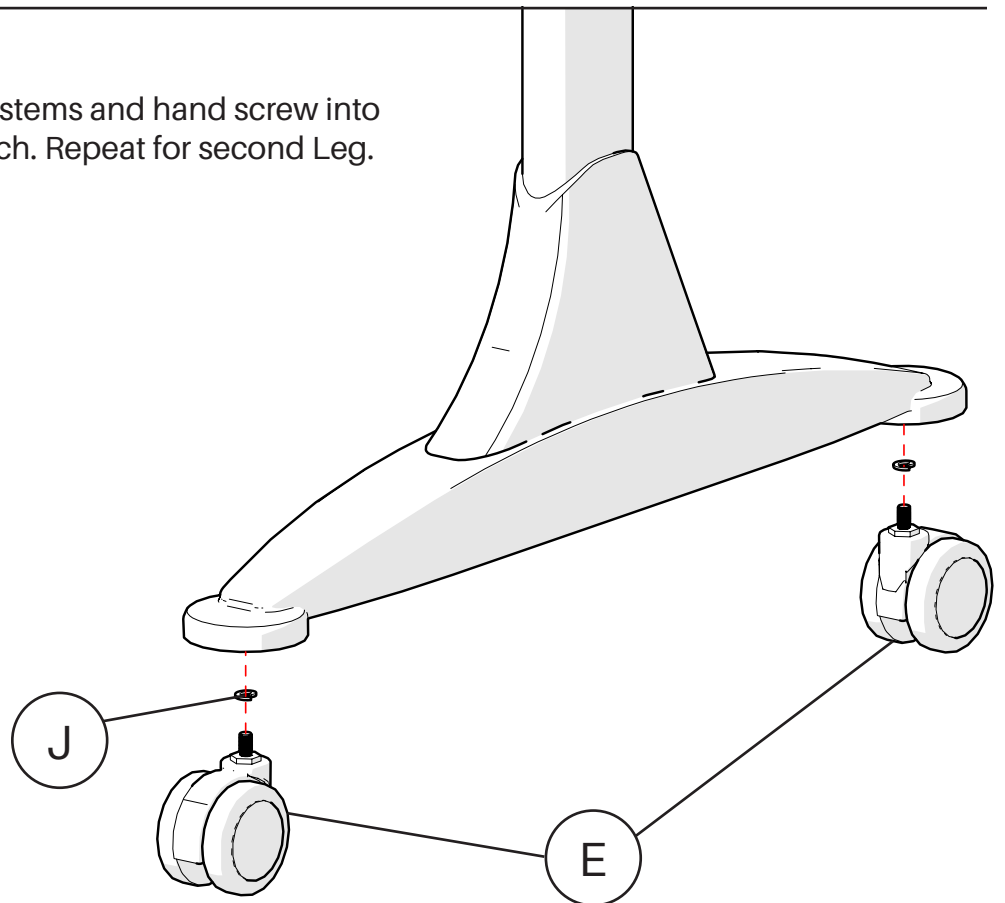



STEP 3

  On Board remove screws from each Board Clip. Line up Flange with holes as shown and replace screws to connect Flange to Board Clip. Repeat for second Flange.

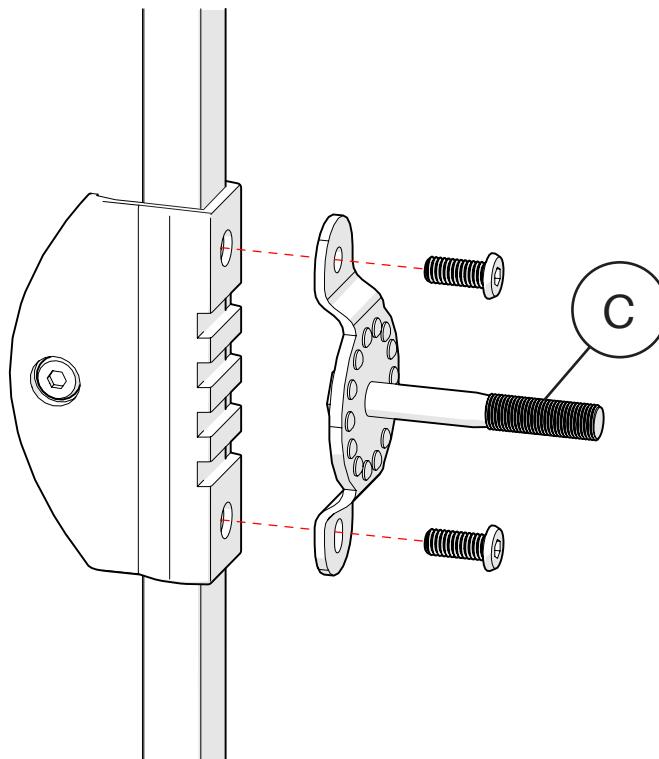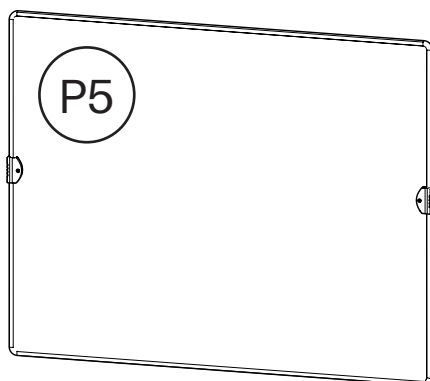



STEP 4

  Insert Flanges on Board into corresponding Legs. This will require pulling the Legs apart slightly to make room for the second Flange. Screw in Knobs to end of each Flange to secure Board in place.

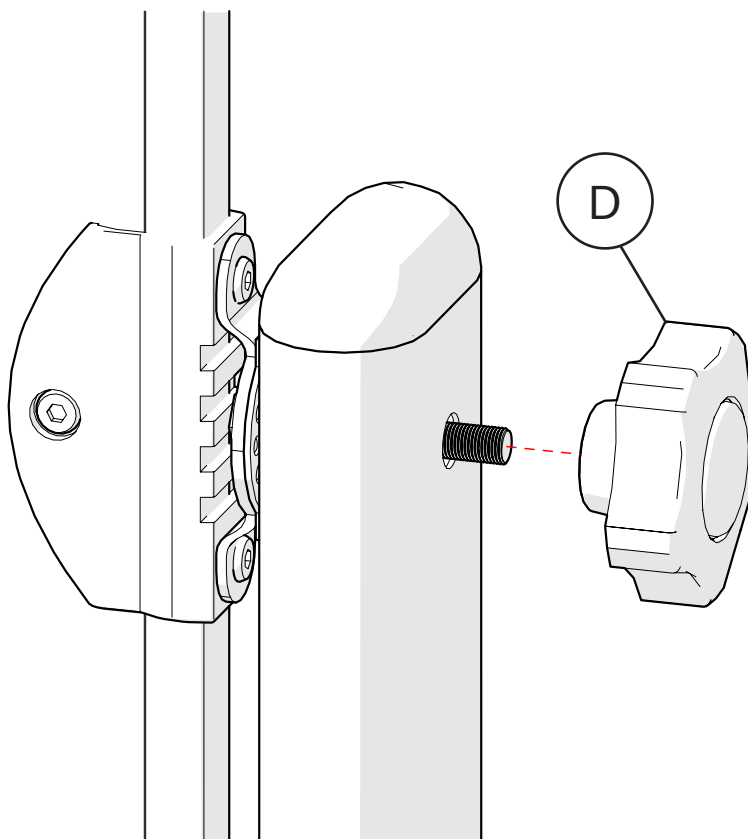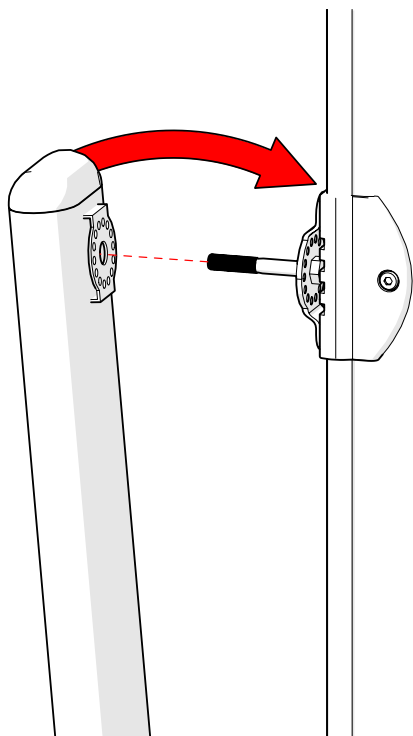

STEP 5

  Attach Tray between Legs using two screws per Leg. The orientation of the Tray will determine front of reversible.

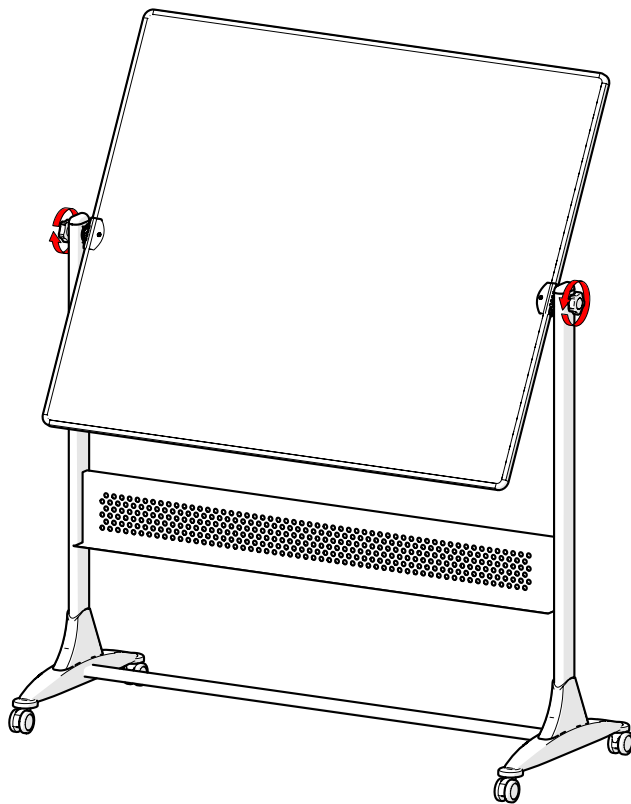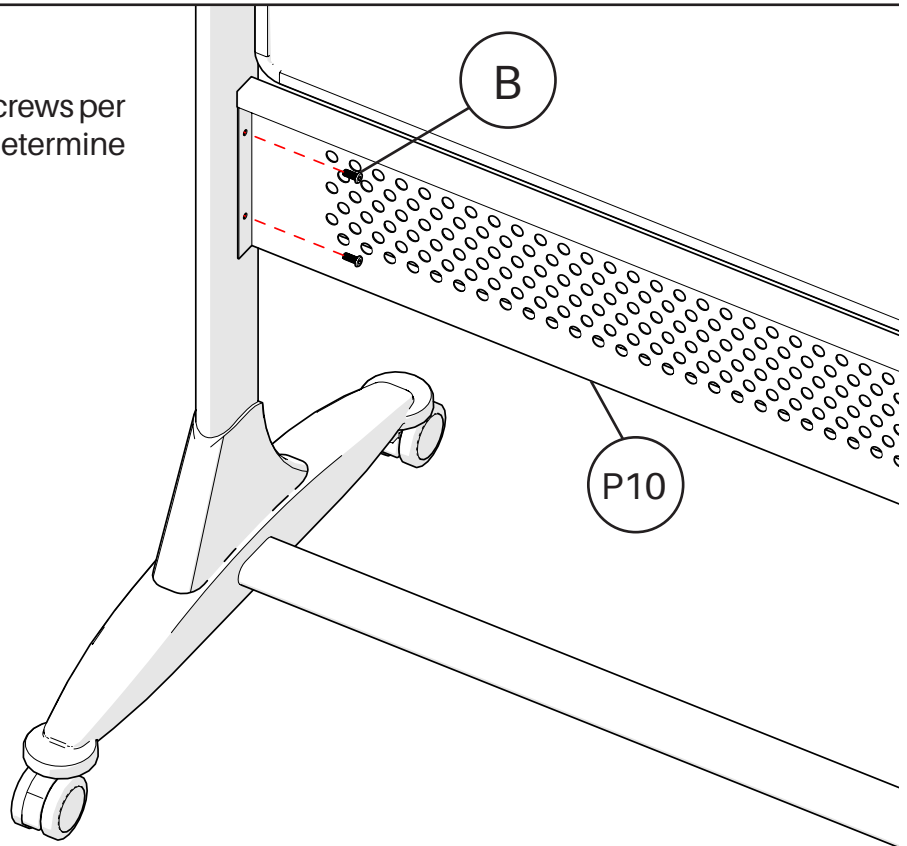

To reverse board, simply loosen knobs on both sides. Flip board then re-tighten knobs to continue using.

THIS COMPLETES ASSEMBLY INSTRUCTION